



# RTR-600Z Maintenance Manual


## 1. Repairing Procedures for No sound, No Picture and No Light

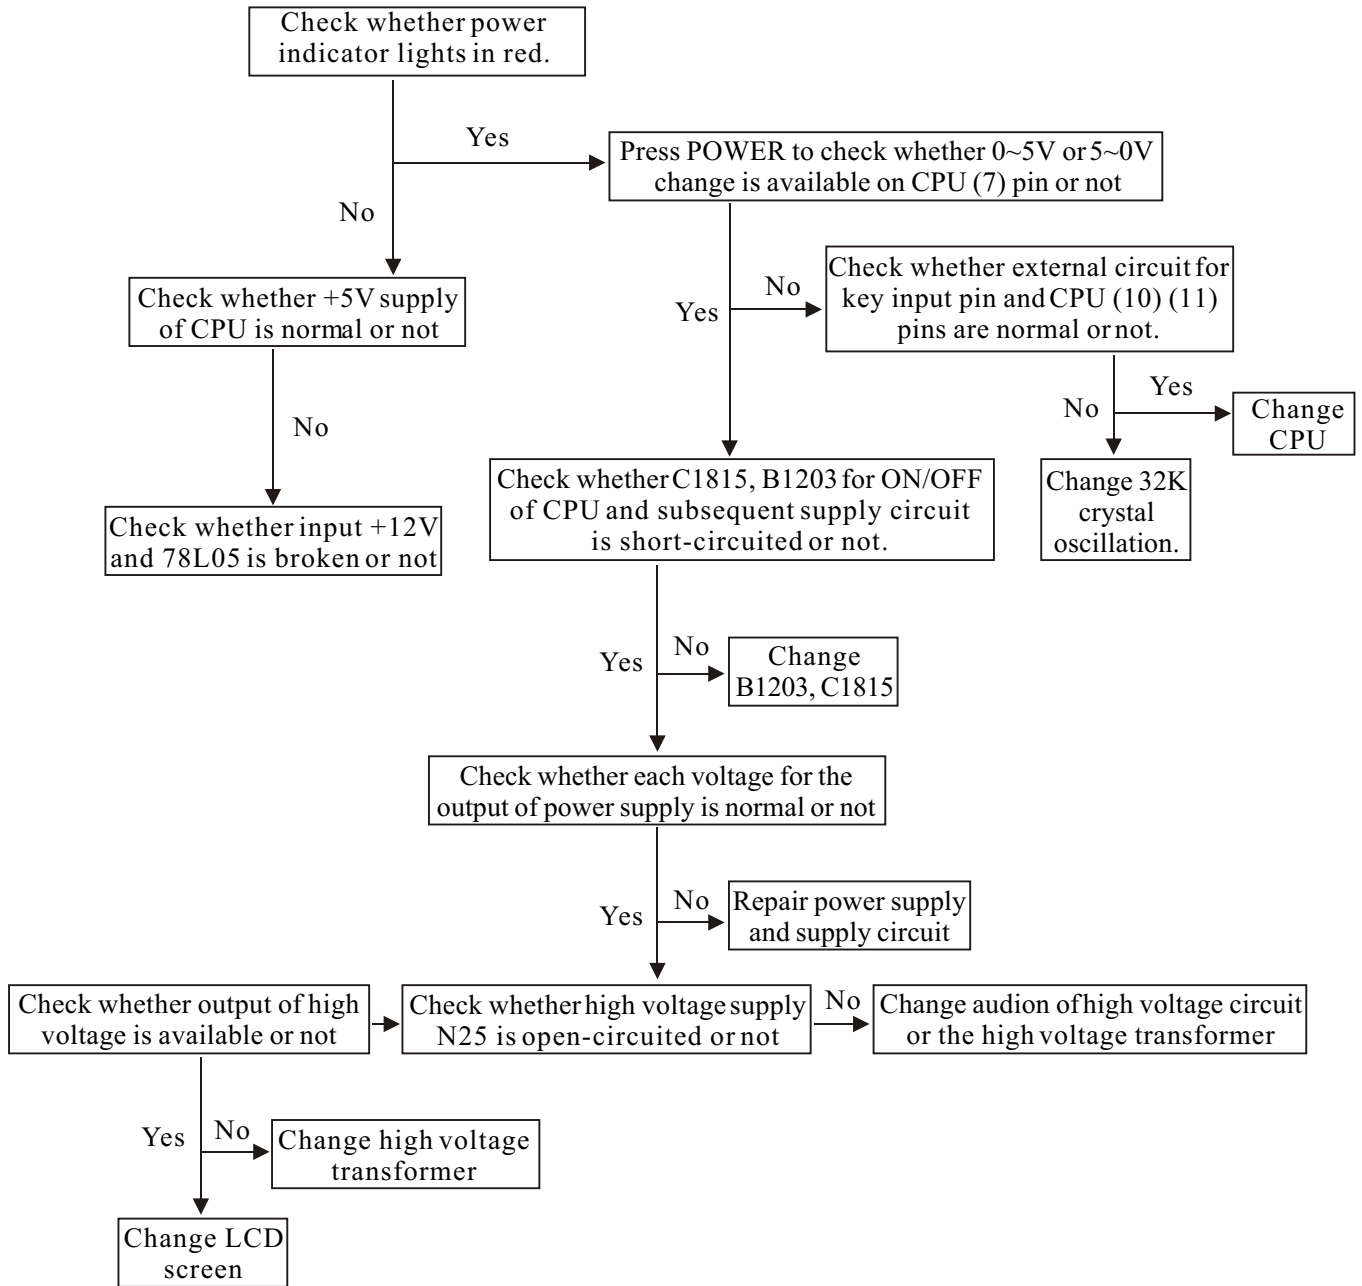


## 2. Repairing Procedures for Inferior Color

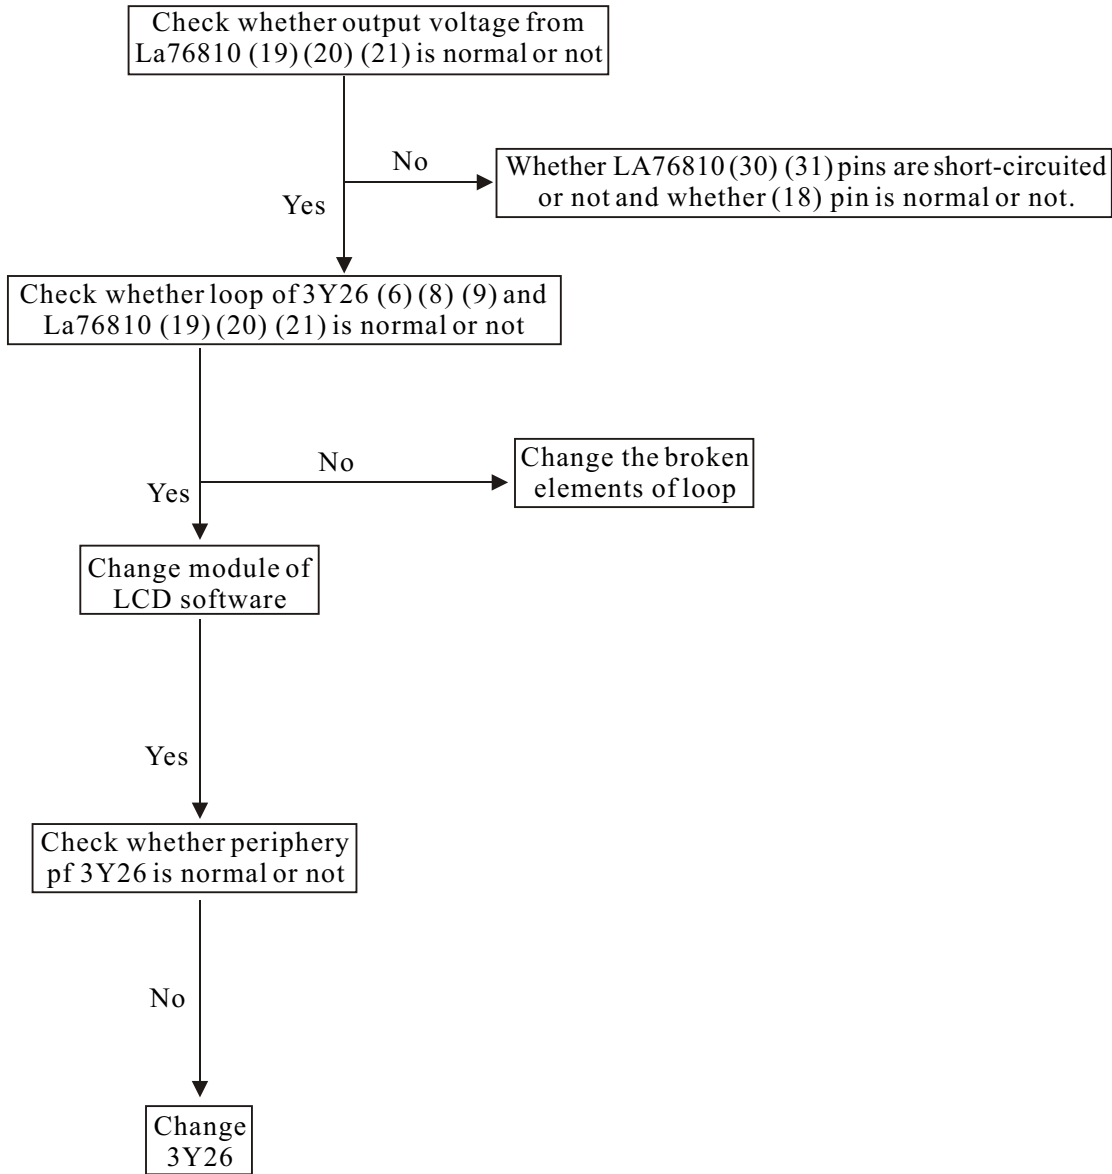


### 3. With Sound, With Light and Black Screen

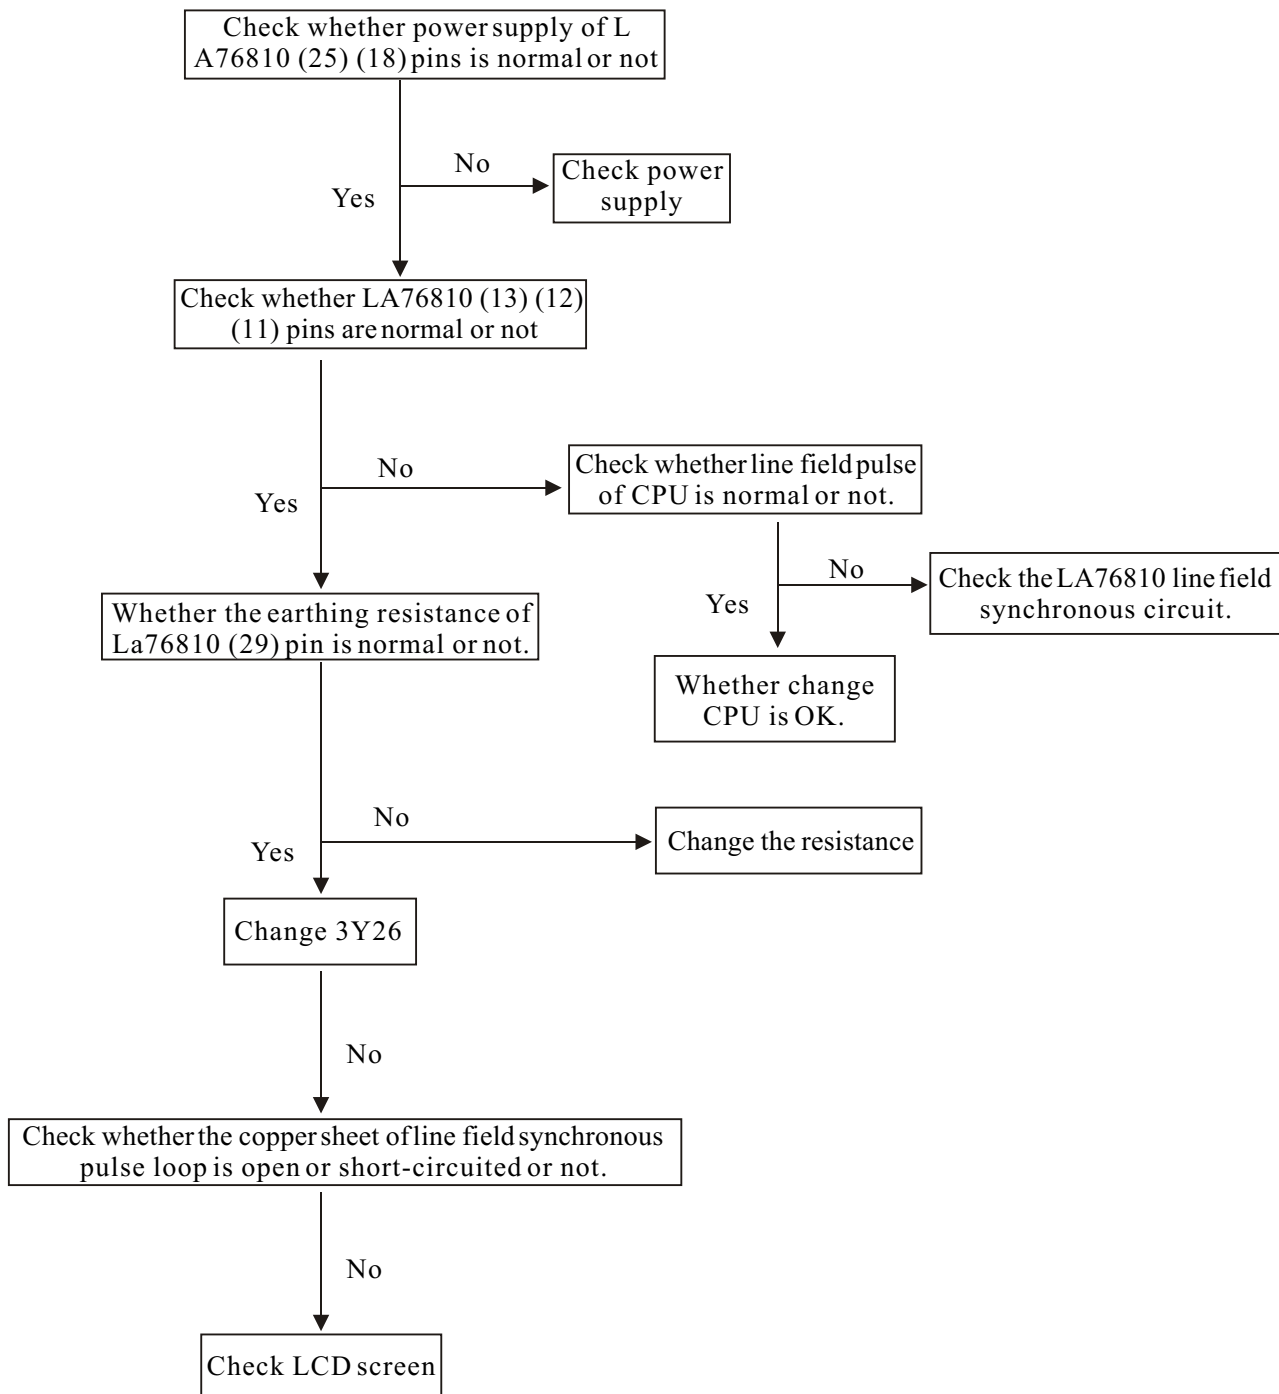


## 4. Repairing Procedures for Line Field Asynchronization

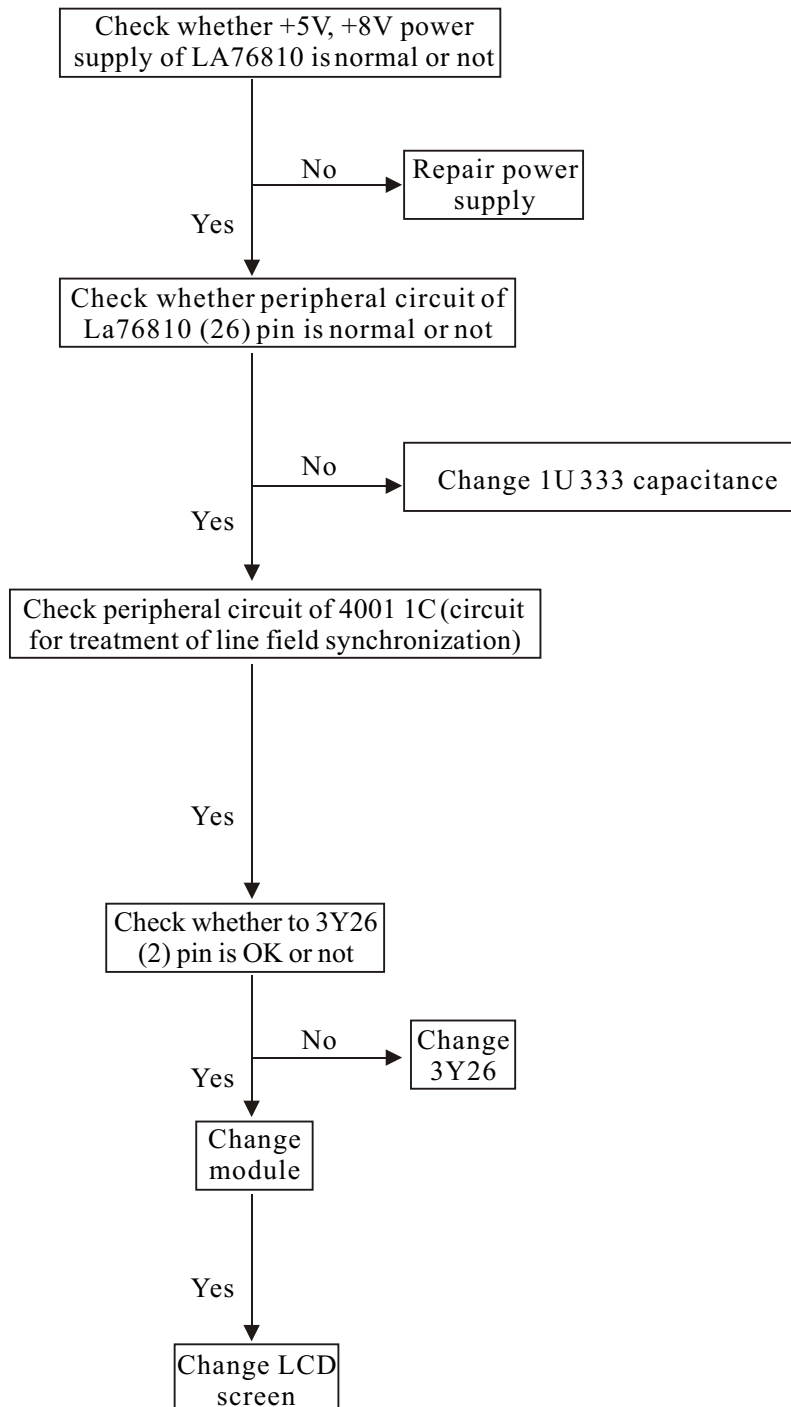


## 5. Repairing Procedures for White Light

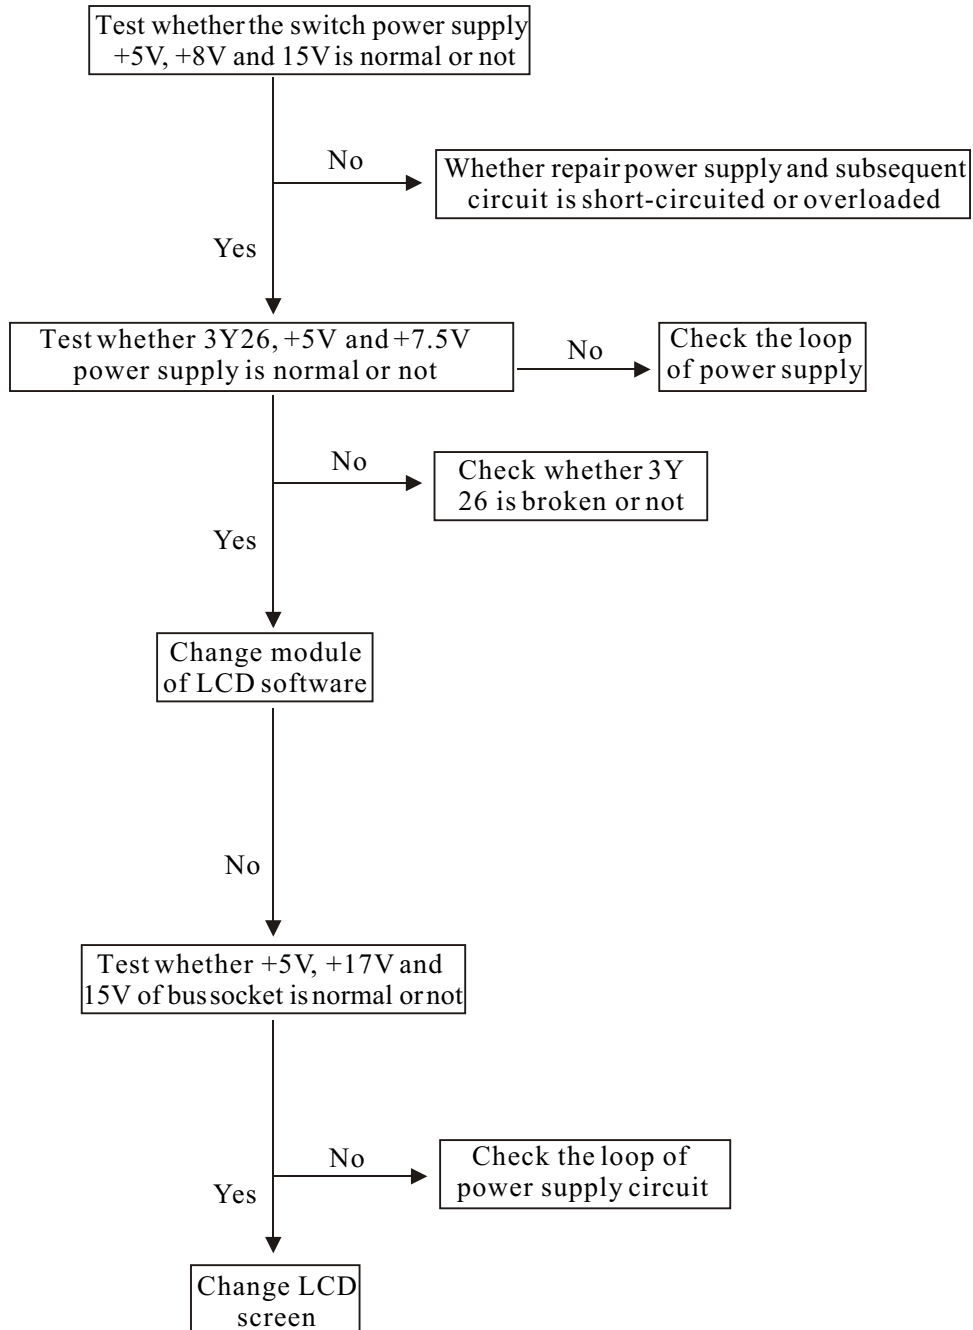


## 6. No Signal

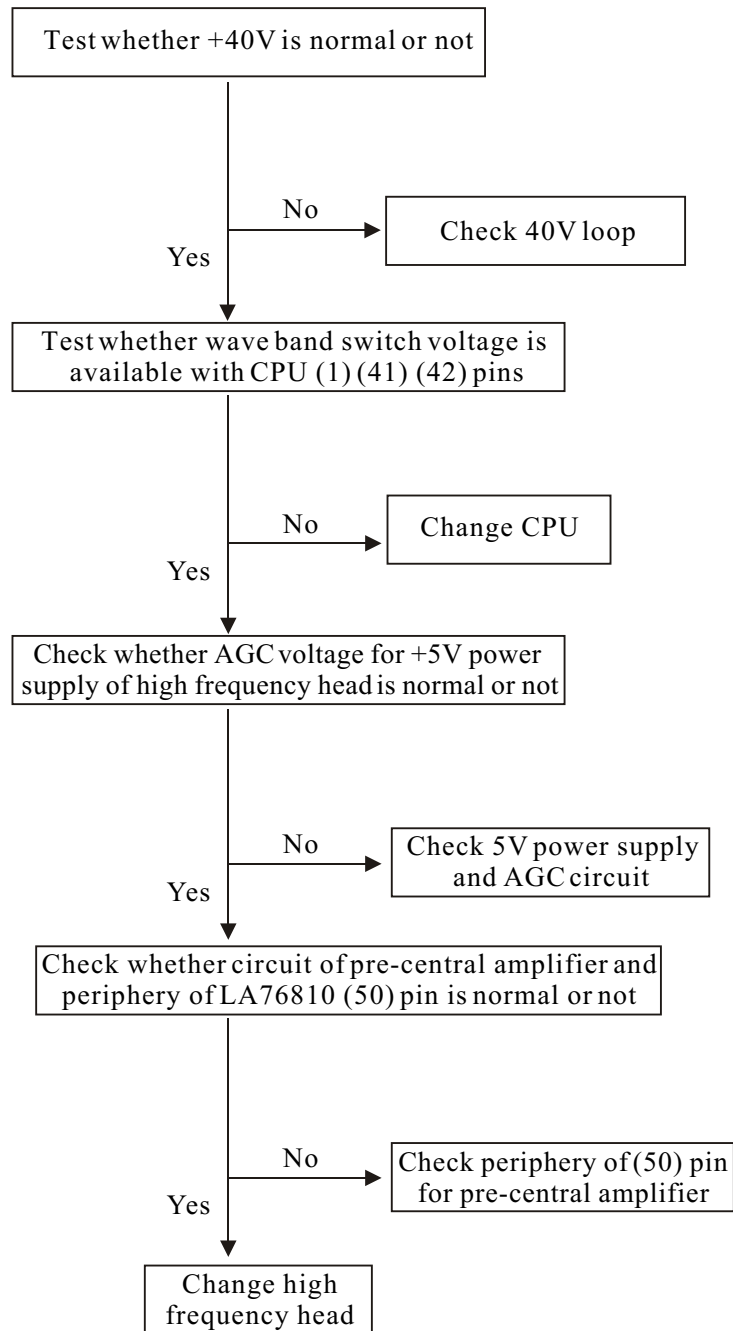

## 7. No Storage of Program

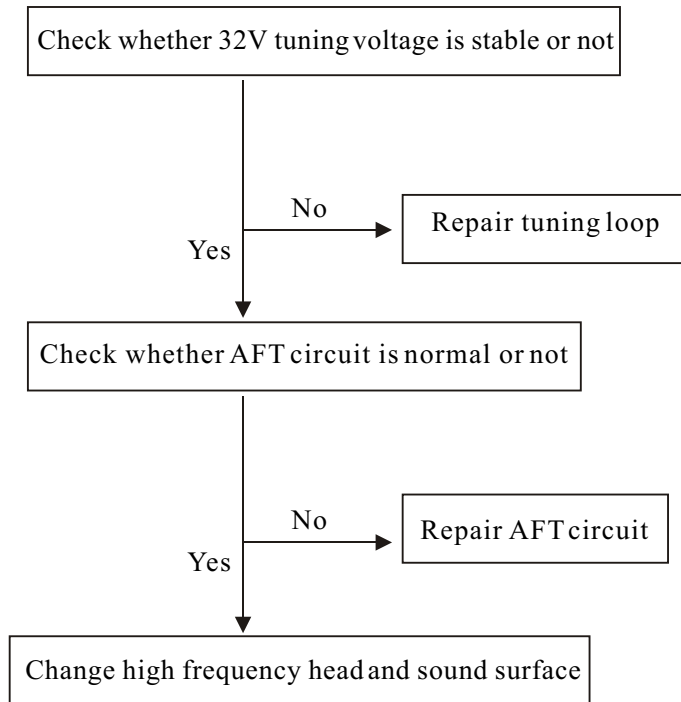


## 8. With Picture, No or Low Sound and Distortion

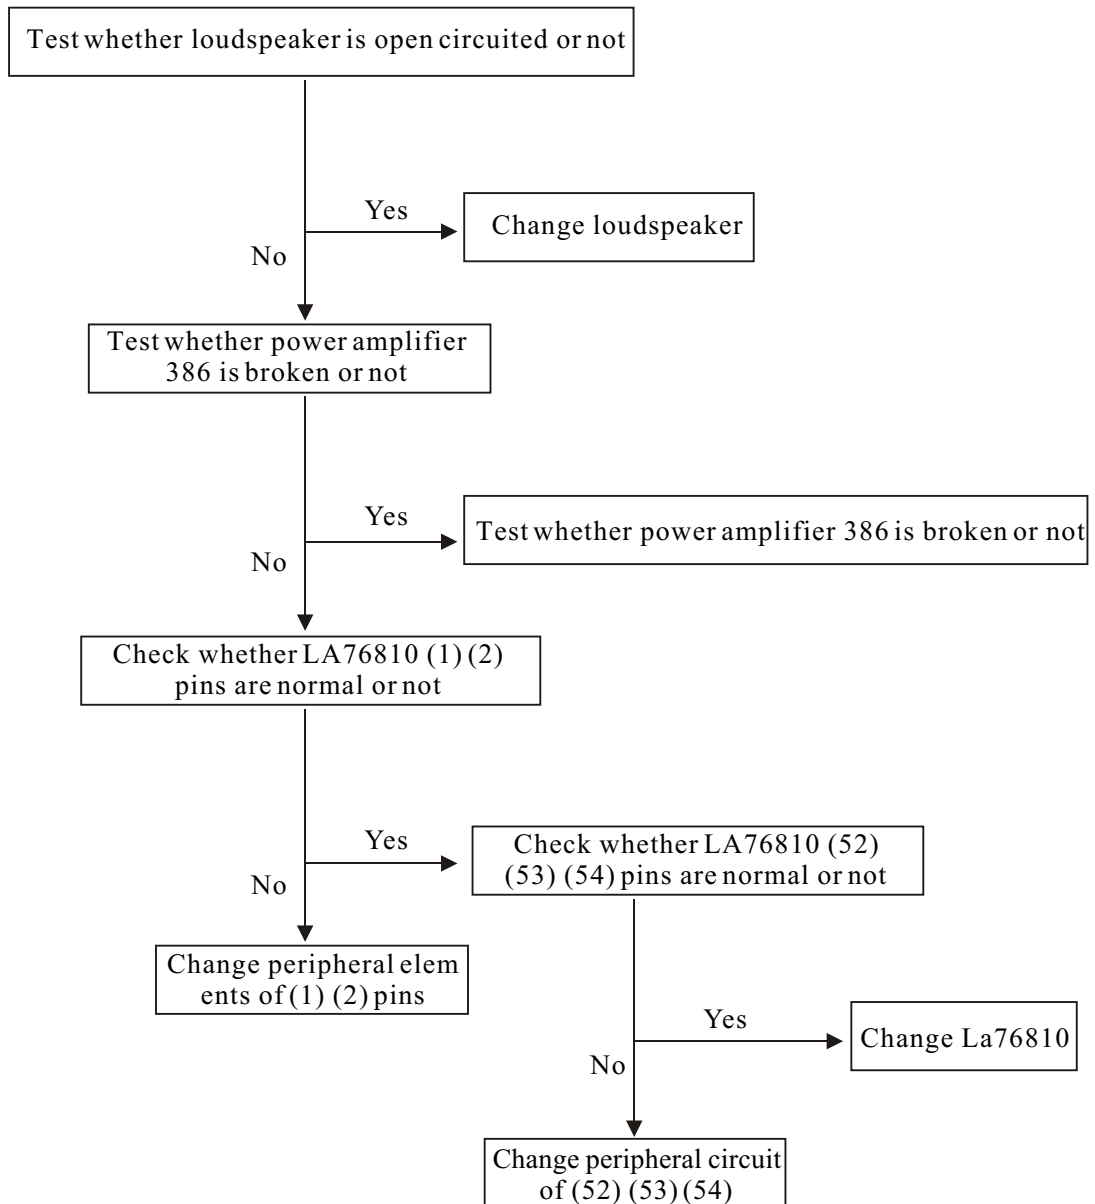


---


## 9. Dark Light

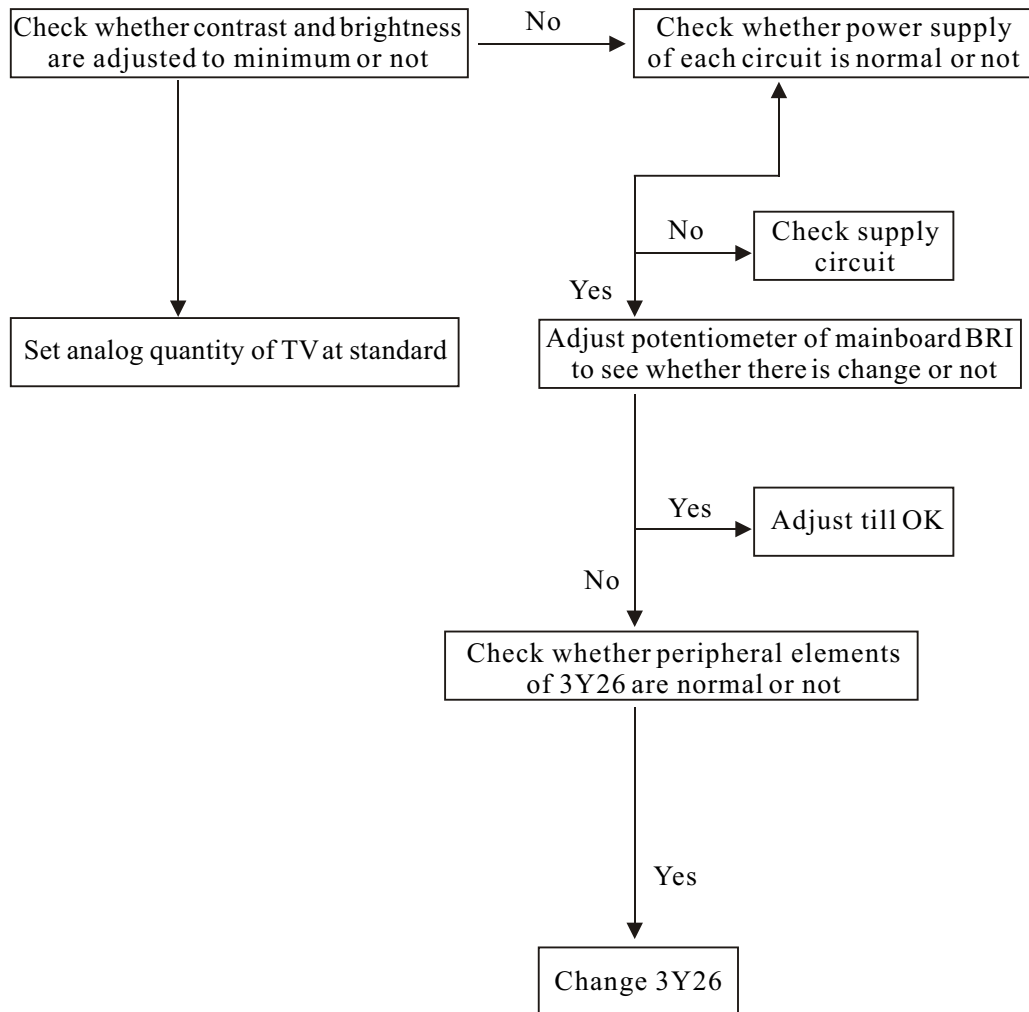

## 10. With Picture, With Sound, No Character or Inferior Color

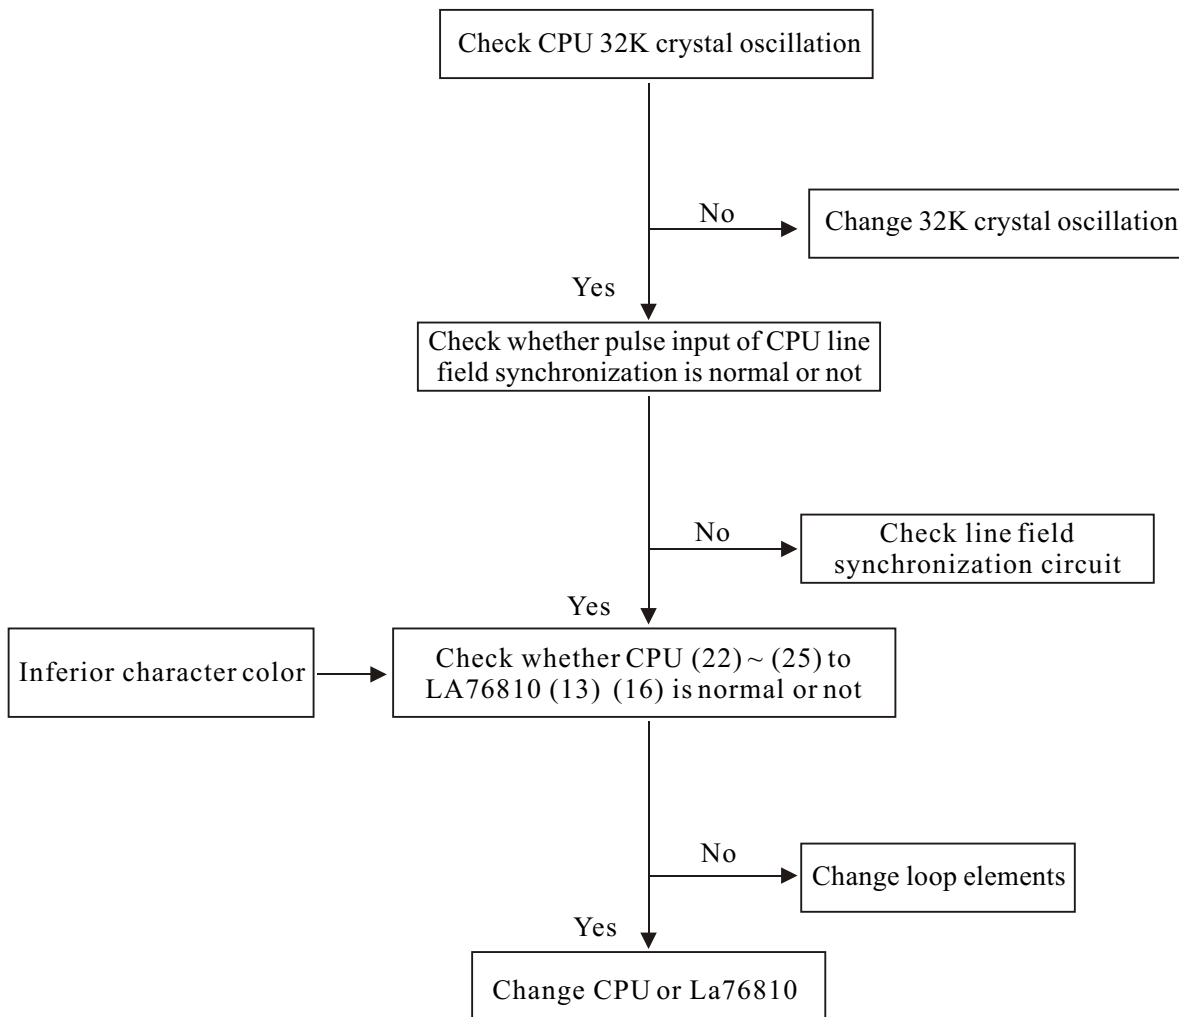

## 11. No Picture or No Sound in AV

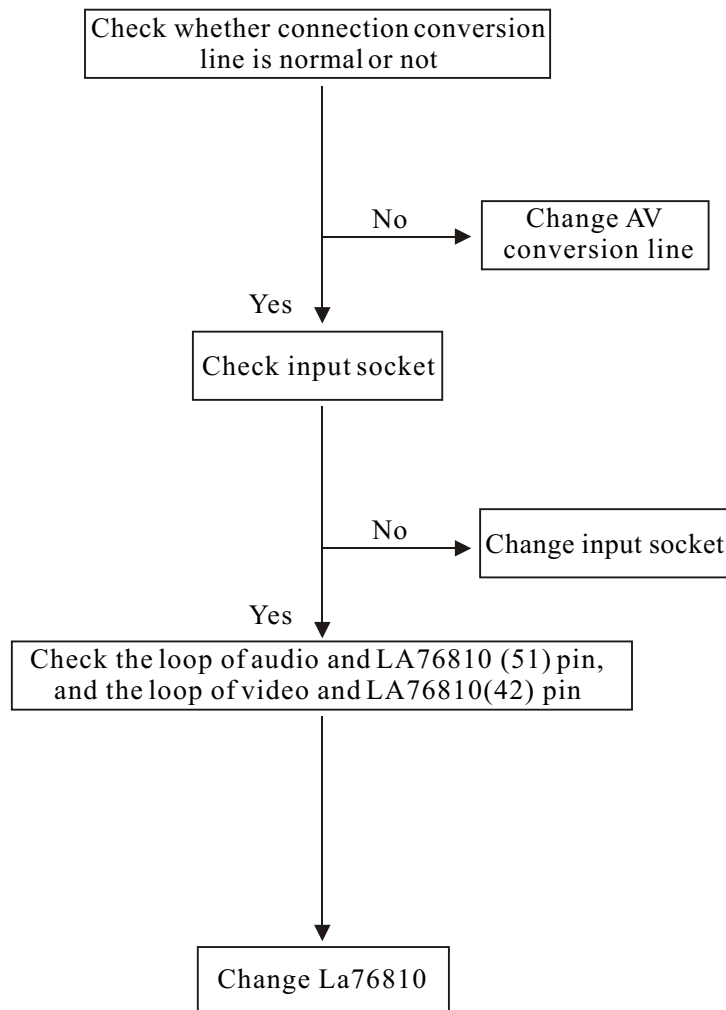

## 12. No Flip Vertical / Horizontal Function

