



RTR-500Z Maintenance Manual


1. Repairing Procedures for No sound, No Picture and No Light

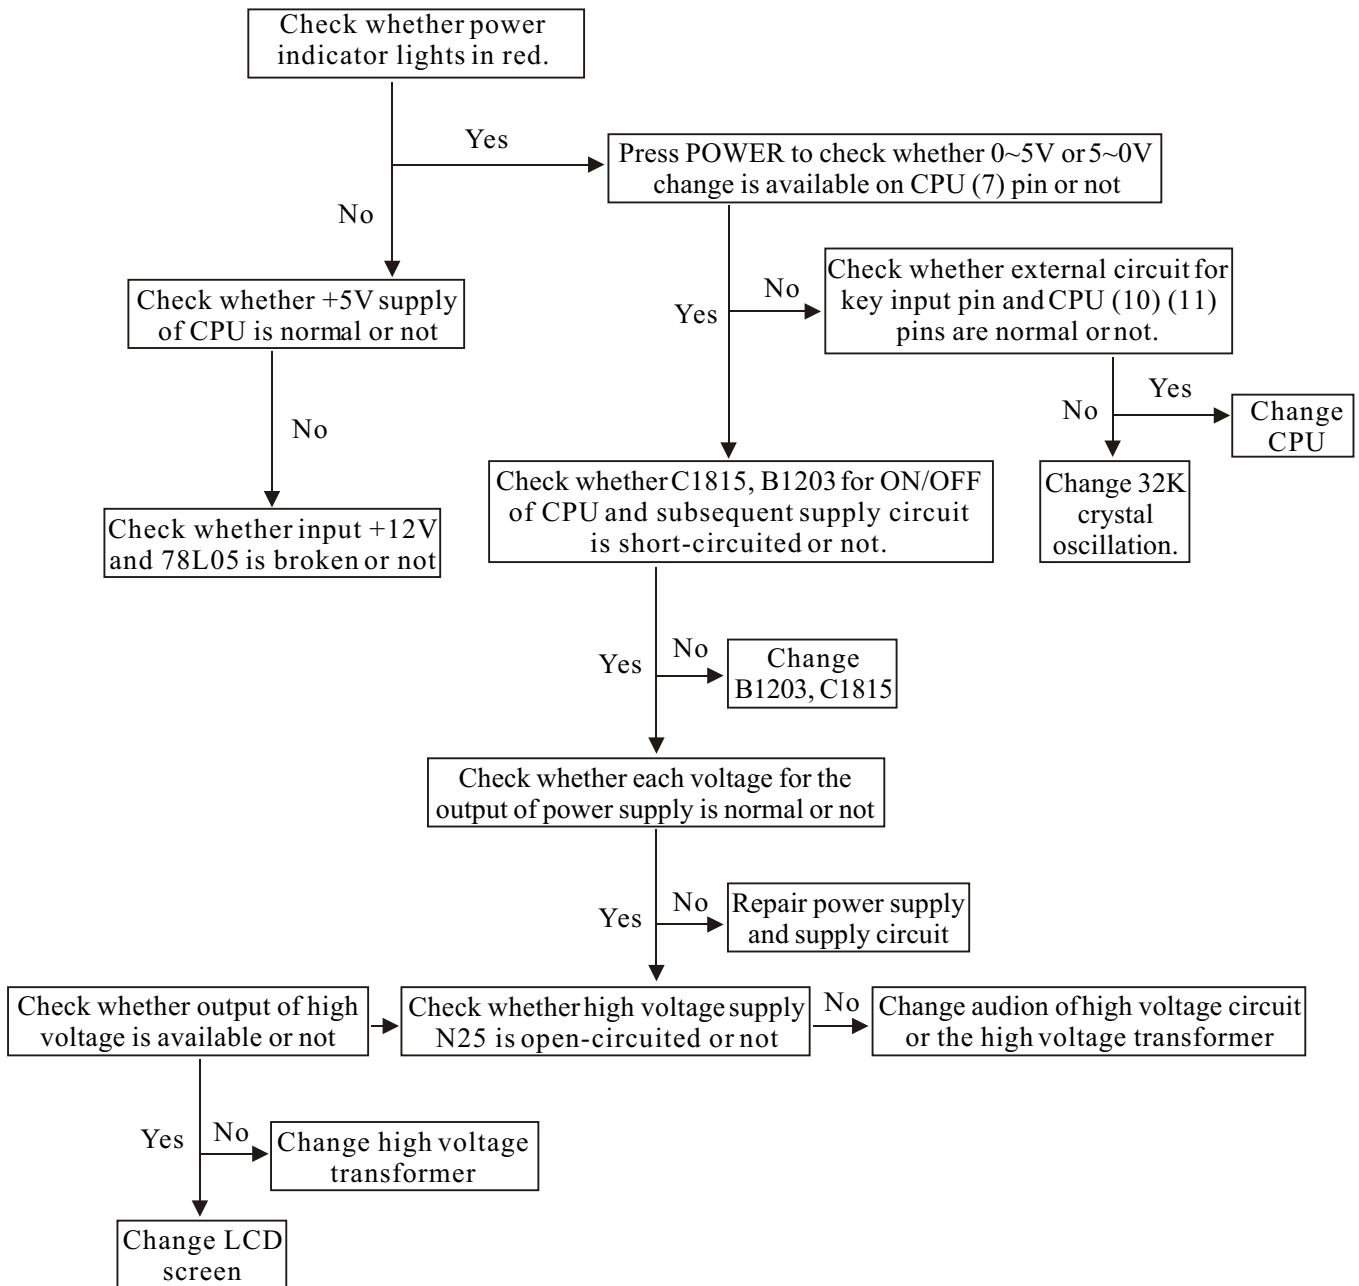


2. Repairing Procedures for Inferior Color

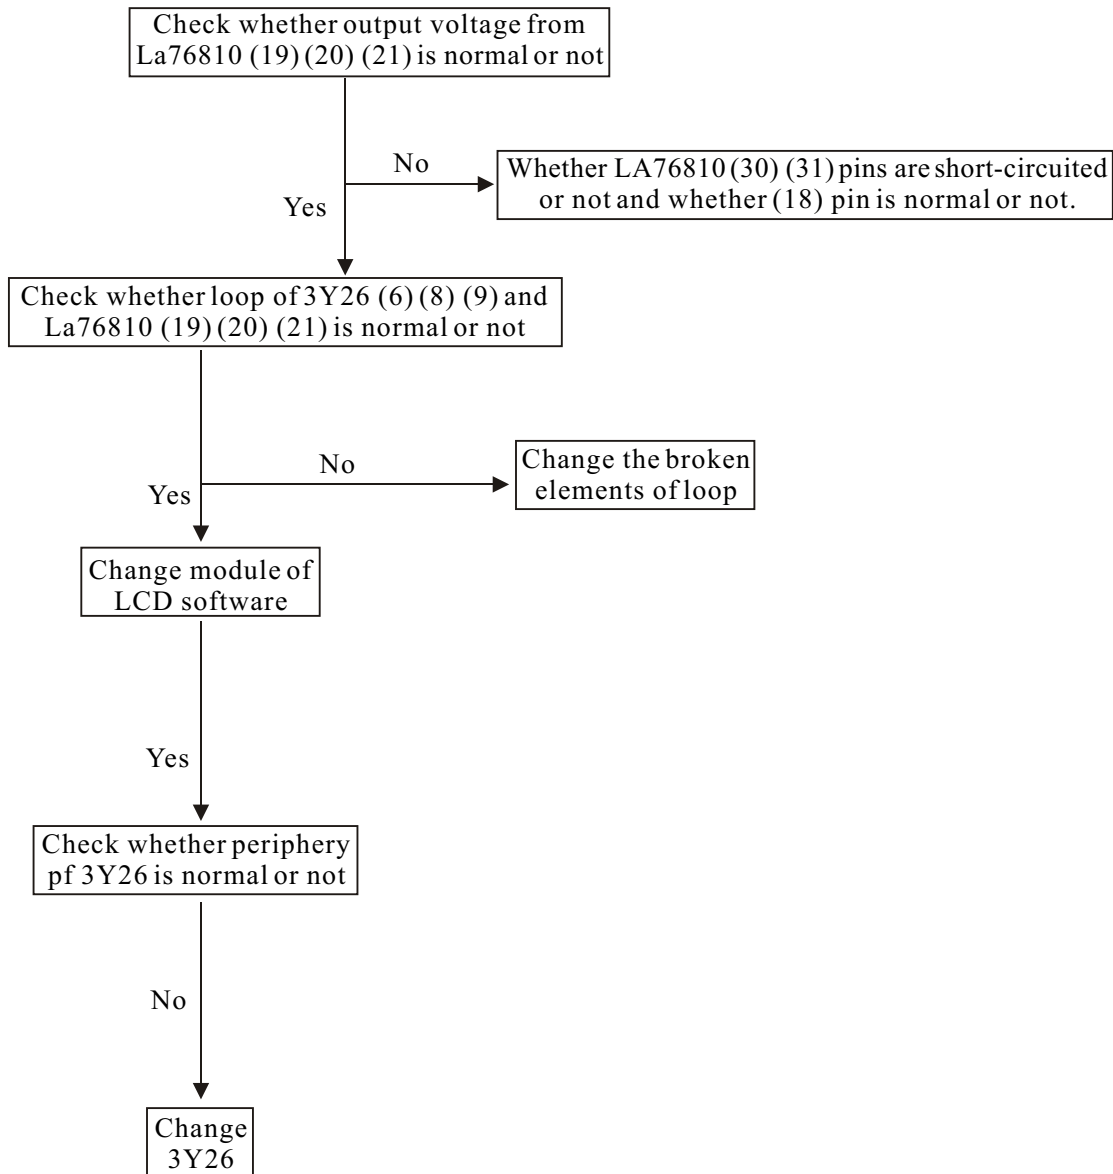


3. With Sound, With Light and Black Screen

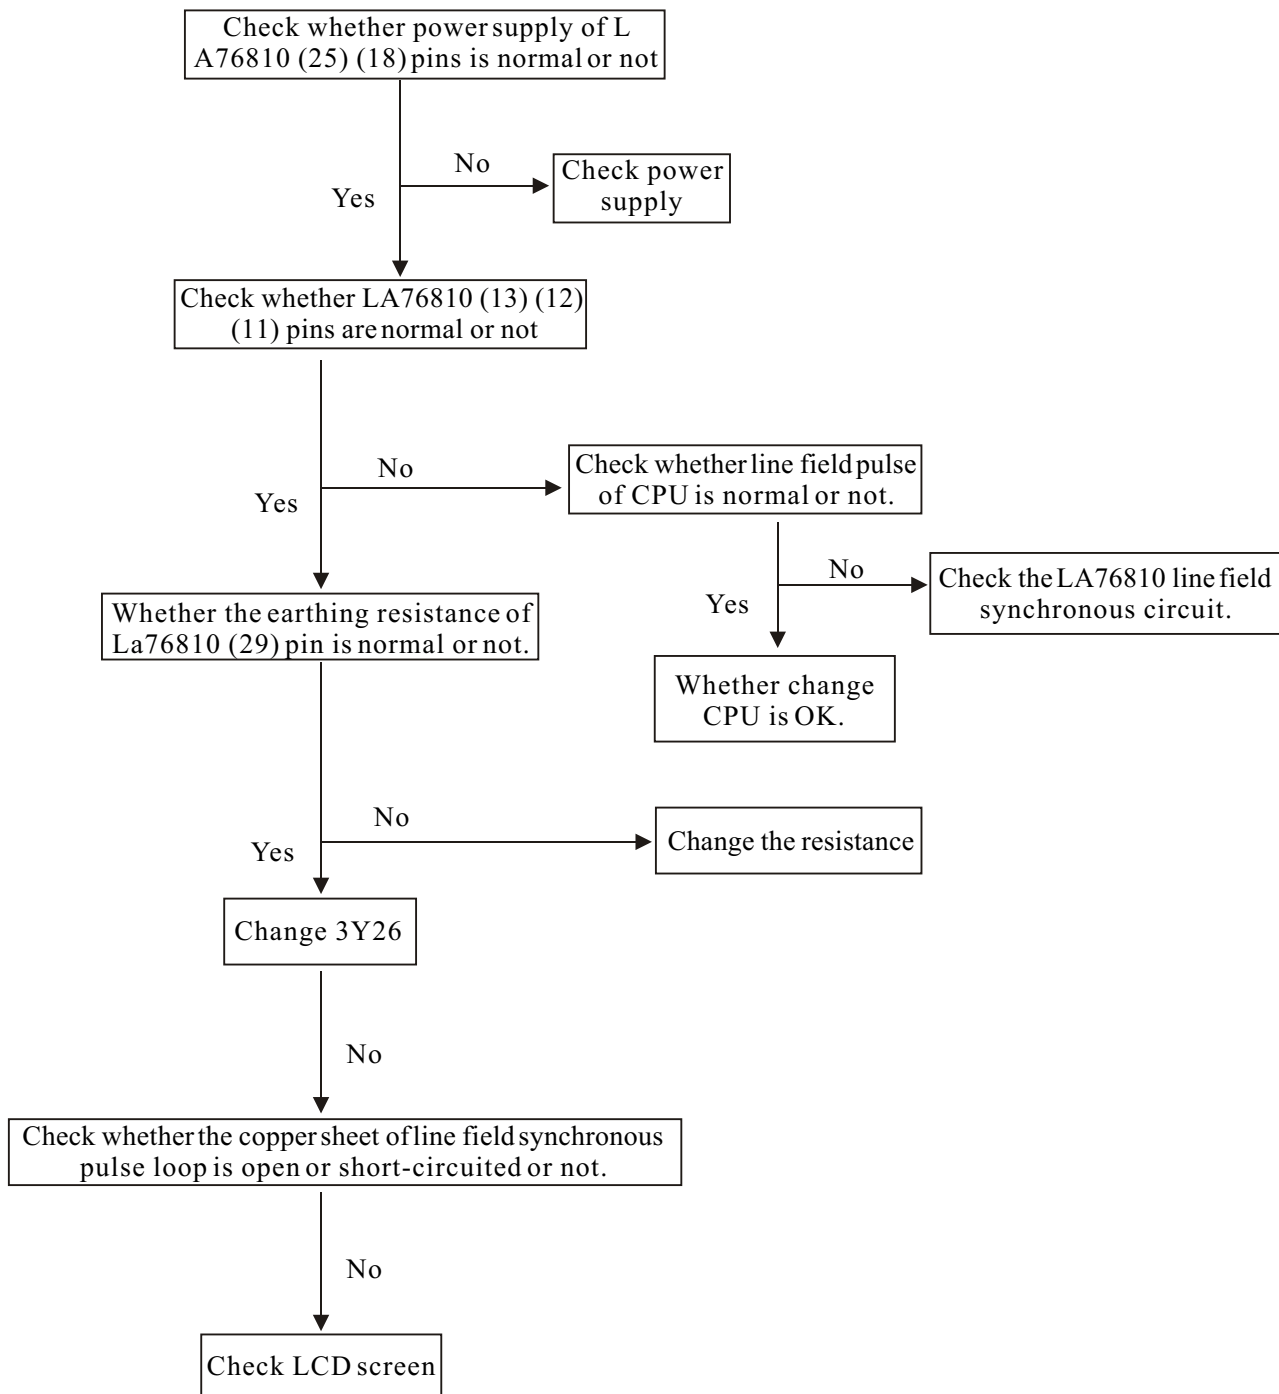


4. Repairing Procedures for Line Field Asynchronization

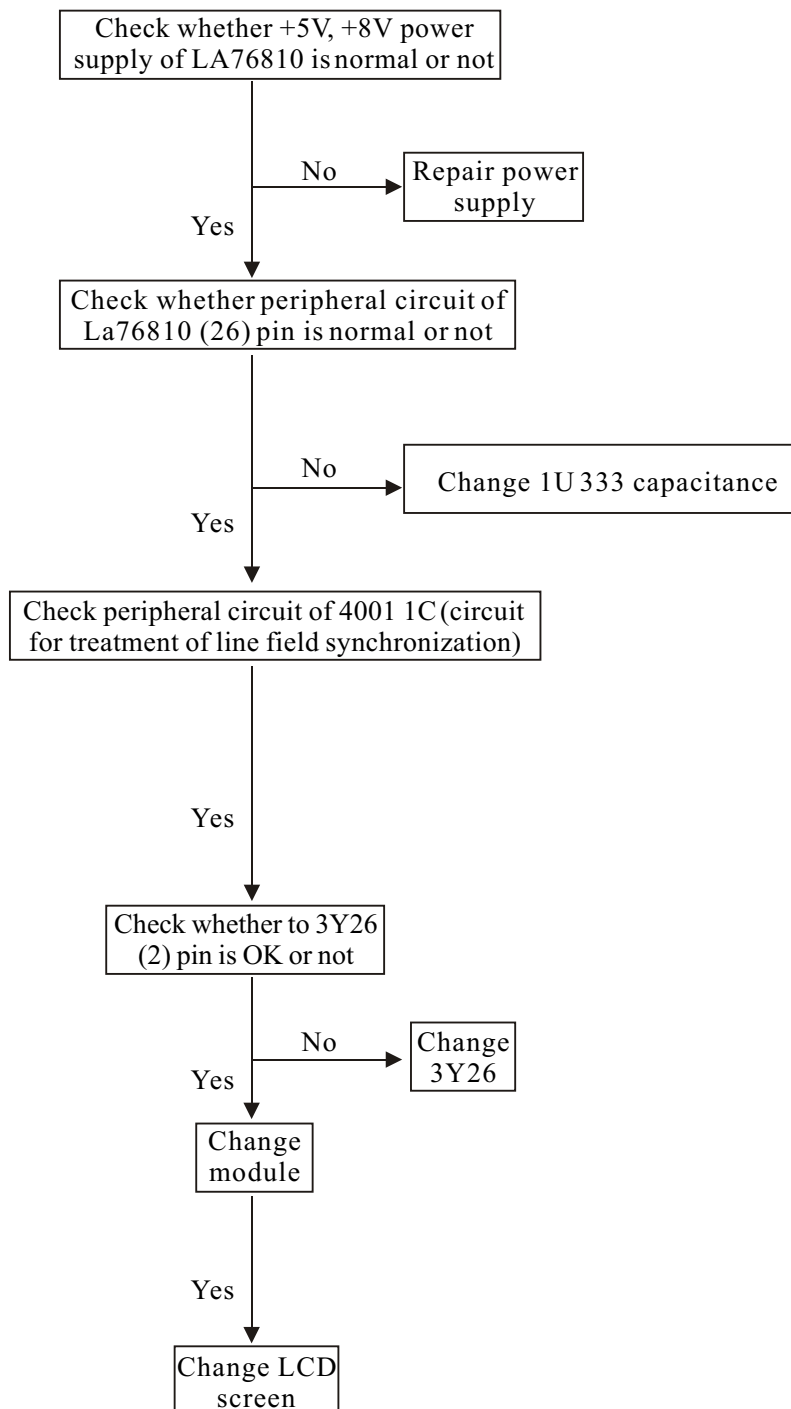


5. Repairing Procedures for White Light

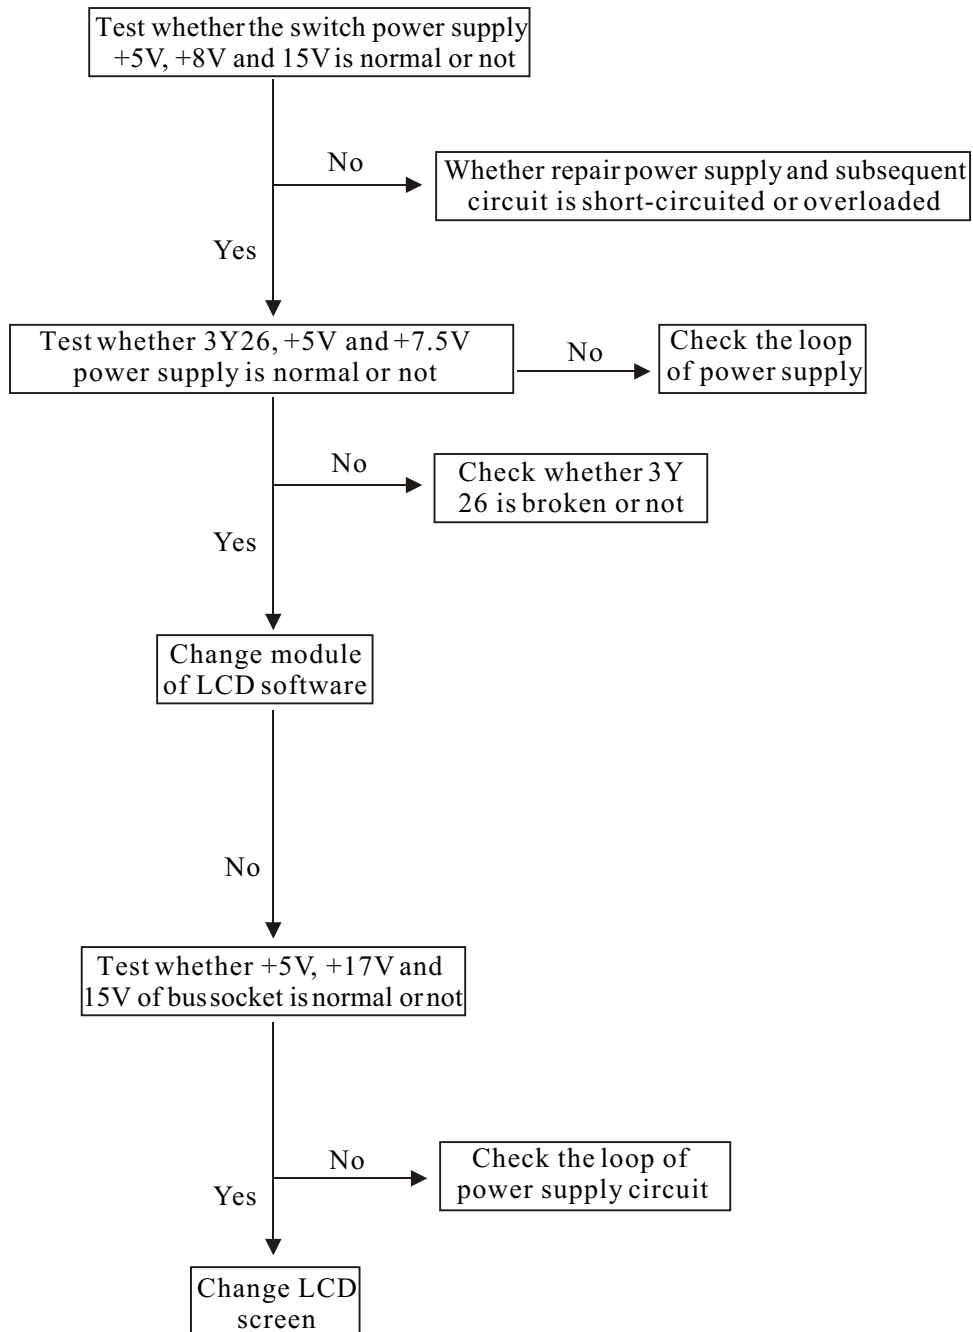


6. No Signal

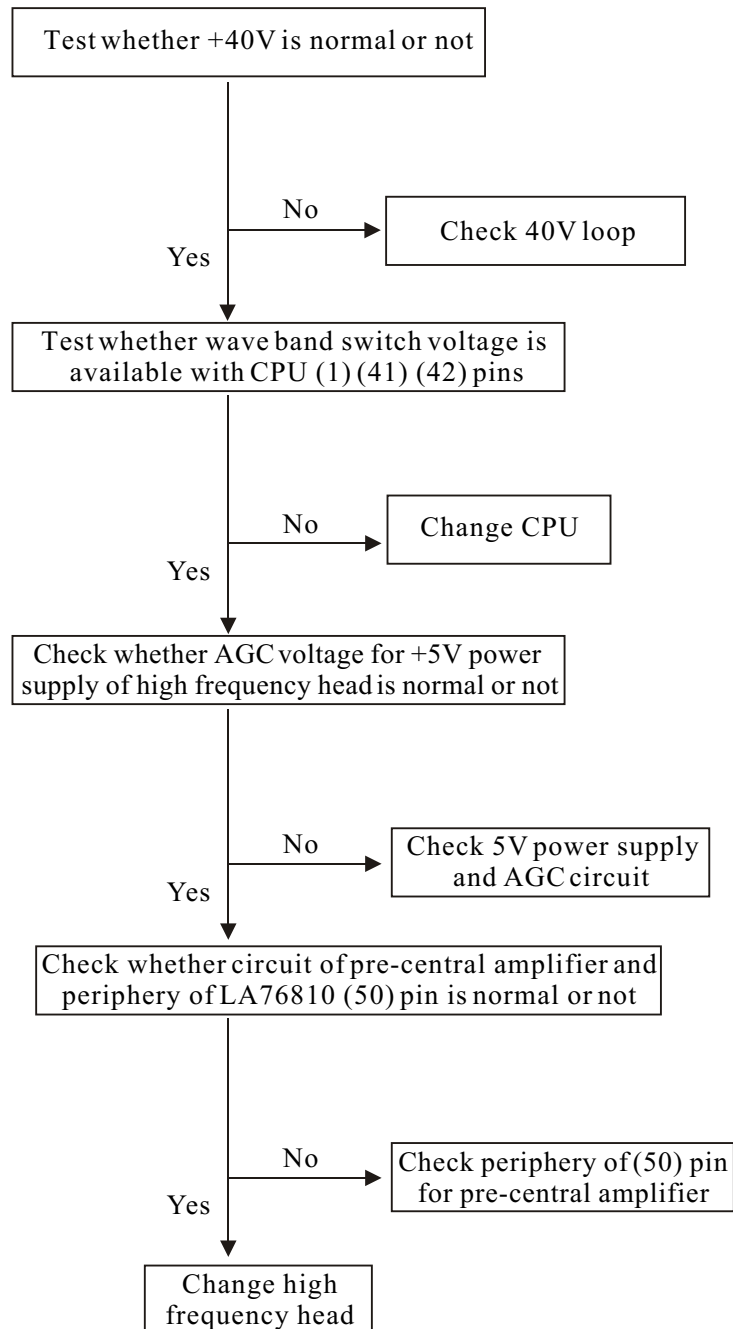


7. No Storage of Program

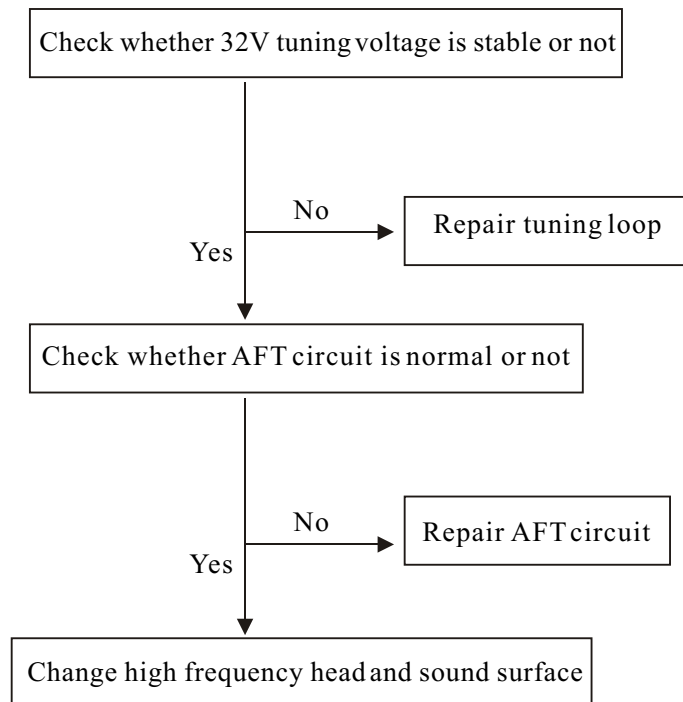


8. With Picture, No or Low Sound and Distortion

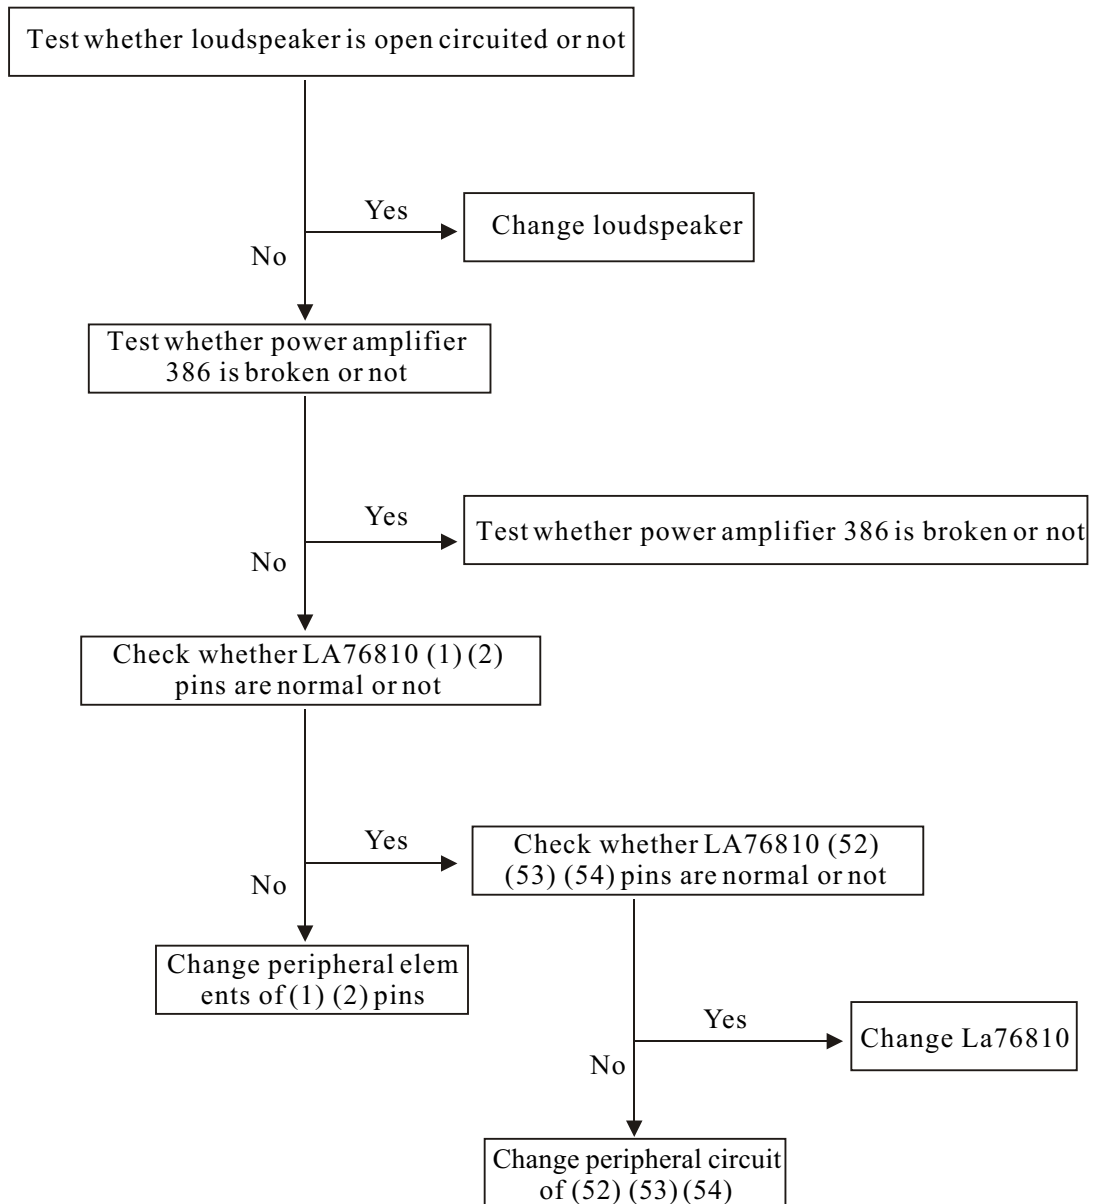


9. Dark Light

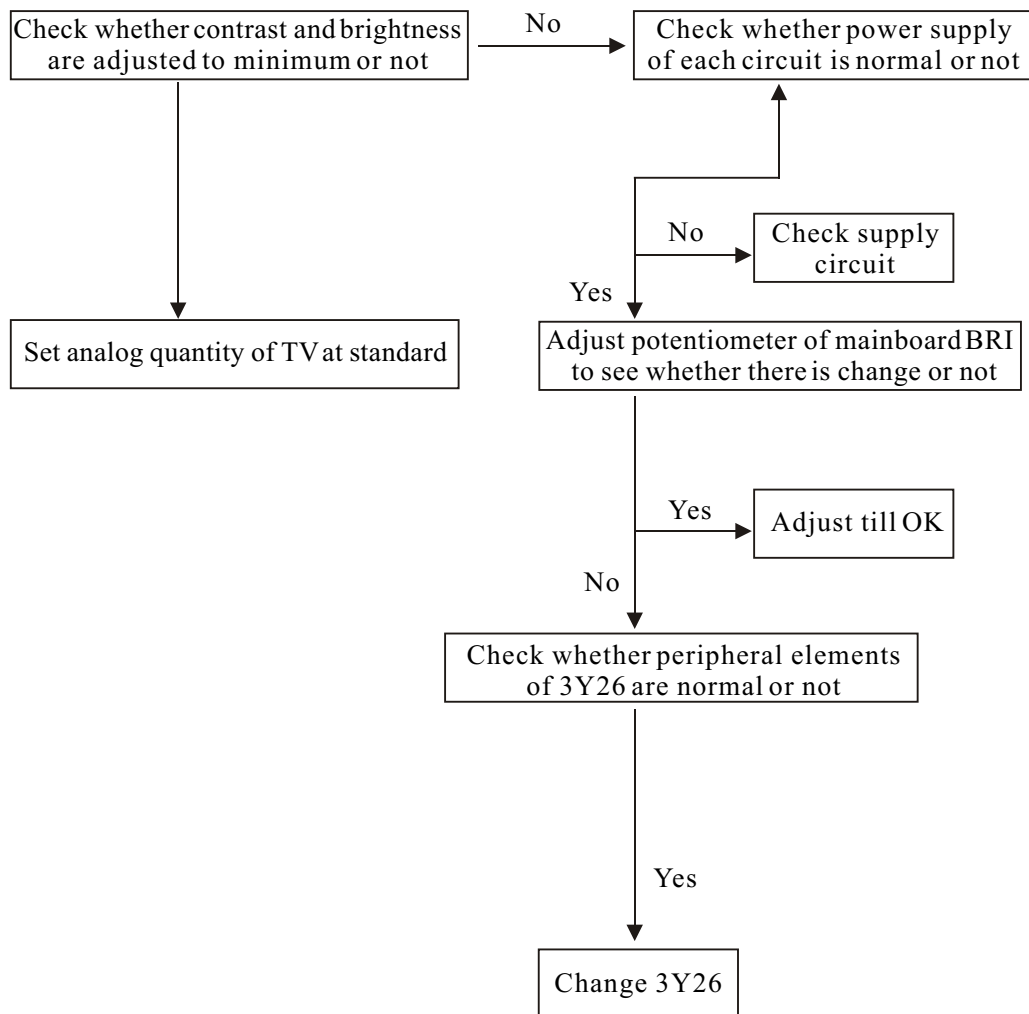

10. With Picture, With Sound, No Character or Inferior Color

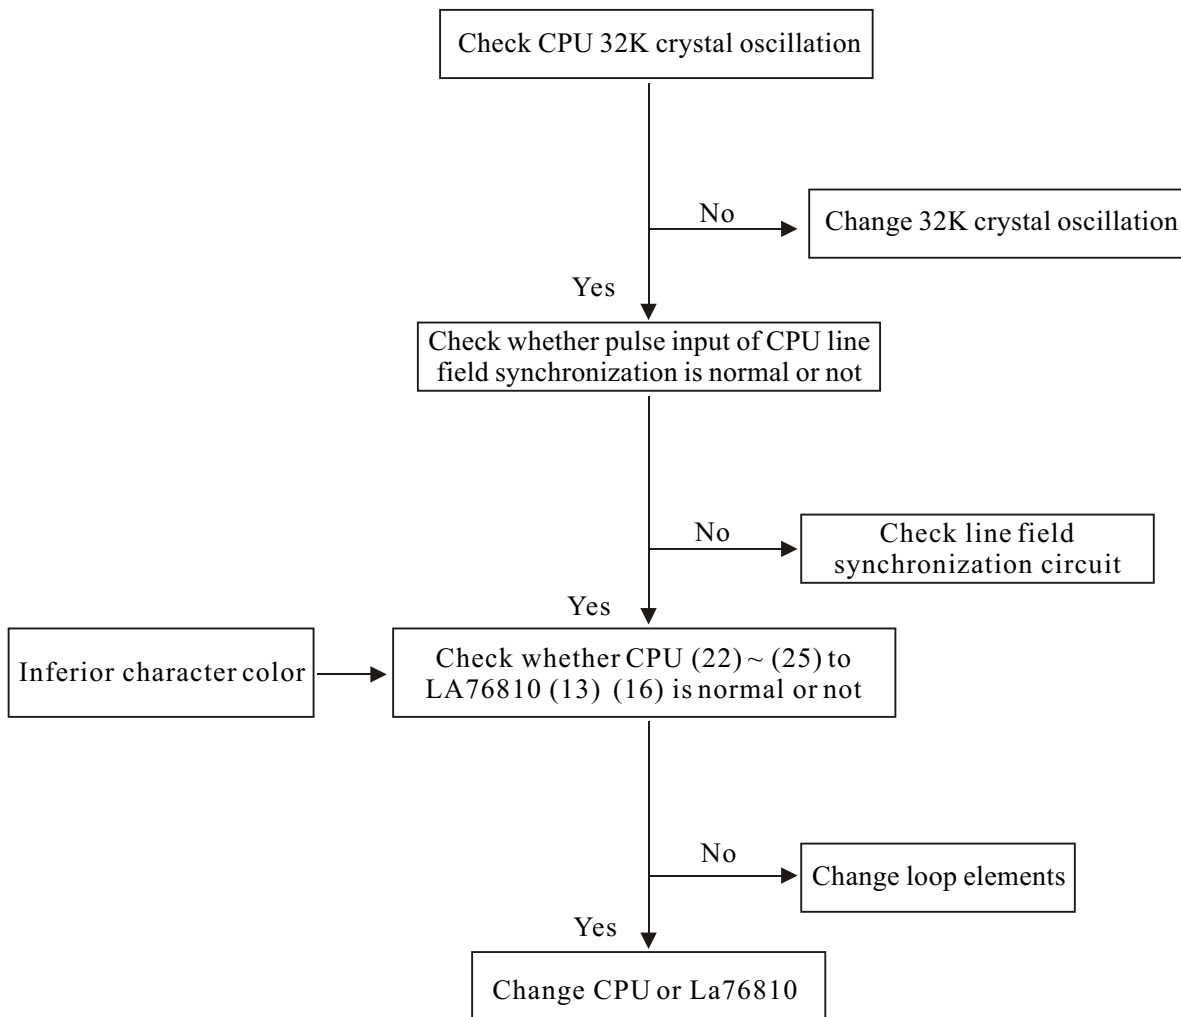

11. No Picture or No Sound in AV

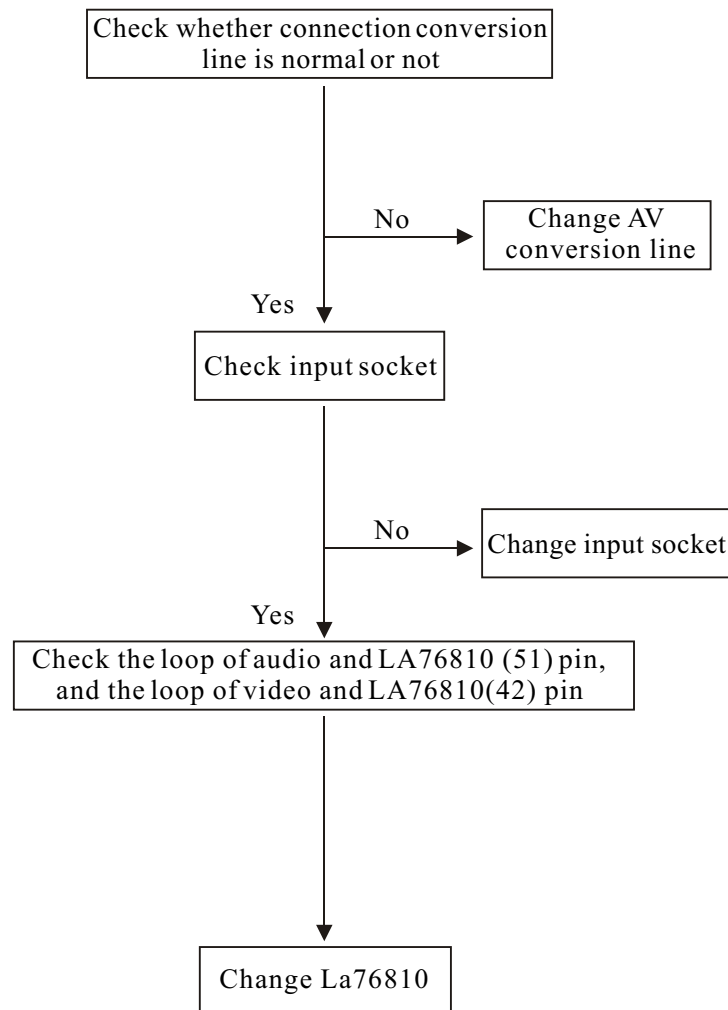

12. No Flip Vertical / Horizontal Function

